

J. Higgins

MODEL 31

.22 CAL. SEMI-AUTOMATIC RIFLE



Shoots short, long, or long rifle cartridges,
either regular or high speed, interchange-
ably and automatically without adjustment!

MODEL 31...

Here is America's newest rifle! The versatile Model 31 is tops for field shooting and target practice. It operates with regular or high speed ammunition in .22 cal. rimfire Short, Long, or Long Rifle. These cartridges can be used interchangeably, without adjustment, in the magazine which holds 17 Long Rifle, 19 Long, or 25 Short shells. Outstanding with this rifle are a built-in mount base, a roll-away Nylon carrying sling, and a ramp-style front sight. A 4 power telescopic sight is available which is specifically adaptable to the Model 31. The many custom features of this autoloading rifle have made it America's favorite among all .22 cal. rifles!

IMPORTANT:

Before firing this rifle, be sure to clean barrel thoroughly of grease, or any obstruction.

CLEANING & LUBRICATING

Your Model 31 is treated with new siliconized and polarized oil. This exclusive patented process gets down into the pores of the steel and protects against perspiration and other corrosive elements which cause rust. This oil makes J. C. Higgins guns the most rust resistant of any guns you can buy. It gives the best lubrication of any oil tested. And it protects and beautifies stock and forearm.

The performance of any semi-automatic rifle depends on how clean it is kept. Exclusive use of J. C. Higgins' ammunition will keep fouling to a minimum, but, because a semi-automatic rifle depends on the powder gases for the repeating action, it must be kept clean to function efficiently. We recommend that your gun be thoroughly cleaned after firing 200 to 250 rounds for continued top performance.

Disassemble the gun, following complete instructions contained in this instruction sheet, into the three basic parts. (a) stock, receiver and barrel group, (b) trigger assembly, and (c) breech bolt assembly.

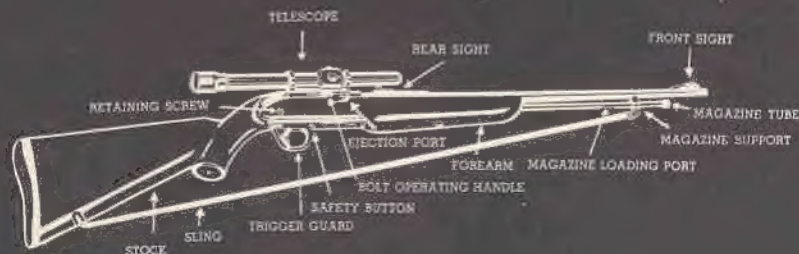


FIG. 1

Using a tooth brush soaked in solvent, clean trigger assembly, getting powder fouling out of springs, magazine throat, etc. In same manner clean bolt, getting fouling out of extractor, off of bolt face and firing pin, and out of machined cuts in bolt. Push a patch, moistened with a good solvent through the barrel from the muzzle end. Push a brass brush, soaked in solvent through the entire length of the bore several times, using long even strokes. Push clean patches through the bore in the same manner until the last patch comes out unsoiled. Push lightly oiled patch through the entire length of the bore. Wipe both trigger assembly and bolt dry, oil lightly, and replace, following instructions for assembly, which follow.

A J. C. Higgins Rifle Cleaning Kit is available especially for .22 caliber rifles (at any Sears Store or from the catalogue), which includes all the necessary materials to carry out the above operations. Another valuable piece of equipment is a J. C. Higgins Silicone Cloth which will help by protecting the outside surfaces of the rifle from rust and moisture.

OPERATING INSTRUCTIONS

TO MAKE GUN SAFE: Safety is located in trigger guard bow forward of trigger. With hammer cocked, push safety from left to right until red band is covered. This movement locks trigger, and gun cannot be fired. Always lock the trigger when carrying a loaded gun.

TO RELEASE SAFETY: Push safety from right to left, exposing red band, and gun is ready to fire.

TO LOAD MAGAZINE: With safety on, turn knurled knob on inner magazine tube, pull tube out and insert cartridges into cartridge opening, continuing the operation until last cartridge is visible (See figure 2). Grasping knurled portion of inside magazine tube, press down with rotating action until magazine tube is fully down and located in supporting notch.

TO LOAD CHAMBER: Retract action fully to the rear and allow to close. Push safety so that the red band appears. Gun is now ready to fire.



FIG. 2



FIG. 3



TO REMOVE CARTRIDGES WITHOUT FIRING: Remove inside magazine tube, and by pointing gun muzzle downward, all cartridges in the magazine tube will drop into the hand. With safety on, work action twice to remove cartridges from barrel chamber and from trigger guard assembly through the ejection port. Pull bolt operating handle back and examine barrel chamber to make sure gun is now empty of cartridges. Inside magazine tube may now be replaced.

TO ENGAGE CARRYING SLING: Pull sling forward from butt stock, invert strap pull and slip over magazine support (See figure 3). Sling will snap into position. Sling may be disengaged by reversing this process.

TO ASSEMBLE J. C. HIGGINS 4X TELESCOPE SIGHT TO RIFLE: Engage mating slot on telescope mount with mating slot on receiver top. The eye piece of the scope should be to the rear and slide forward against the stop. Tighten scope mounting screw and the assembly is complete. (See figure 1).

DISASSEMBLY

TO REMOVE TRIGGER ASSEMBLY: Turn the gun upside down, remove trigger guard retaining screw. Grasp trigger guard and pull up and toward the butt stock. Trigger guard assembly will come free of the receiver as a unit (See figure 4). It is advisable to remove this assembly only when necessary.

BOLT: With gun still upside down, pull bolt operating handle completely to rear. While holding in this position, lift up front of bolt and ease bolt out of receiver releasing pressure on driving spring slowly. Bolt operating handle may then be pulled forward to the ejection port and removed from the gun. (See figure 5).

FORE-ARM: May be disassembled by removing fore-arm retaining screw and sliding fore-arm from receiver.



FIG. 4



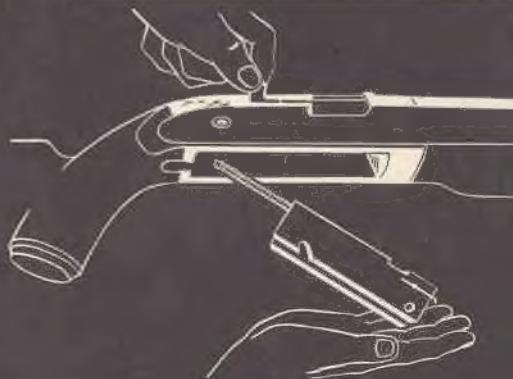


FIG. 5

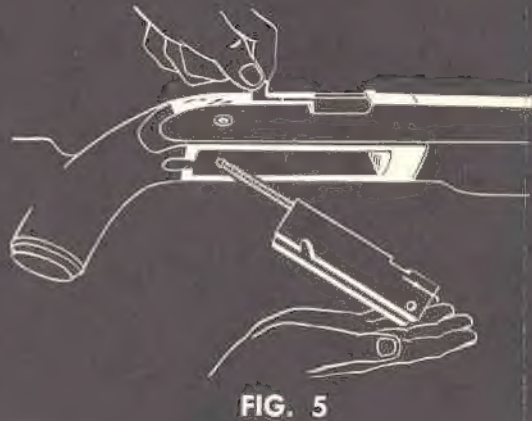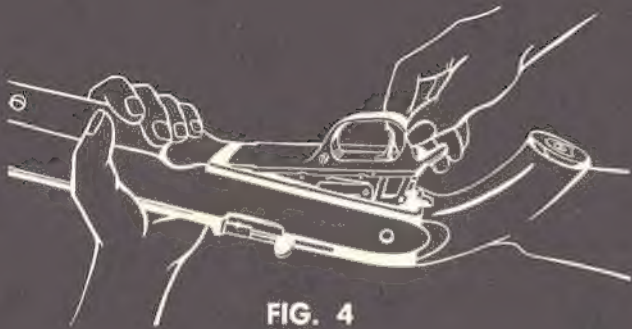

ASSEMBLY

BOLT ASSEMBLY: With gun upside down, replace bolt operating handle back in position so that the notch in the handle faces the opening for the trigger guard assembly. Slide bolt operating handle fully to rear. Insert the driving spring guide into spring and insert spring into hole in bolt. Then fit driving spring guide into the hole at rear of receiver. Push block to rear of receiver against the pressure of the driving spring. (See Fig. 6). Hold the bolt with it inclined slightly and set down over the bolt operating handle and allow the bolt to move forward.

TRIGGER ASSEMBLY: Make sure that hammer is in cocked position. (See Figure 7). With the gun in upside down position, replace trigger assembly by inserting lug on front end of trigger assembly mating slot inside forward end of receiver. Press down and forward against rear portion of trigger guard until fully seated. Insert and tighten trigger guard retaining screw. The gun is now completely re-assembled.

SPECIFICATIONS

| | |
|---------------------------|--|
| Length of Pull | 13 3/4 inches |
| Drop at Heel | 2 1/4 inches |
| Drop at Comb | 1 1/2 inches |
| Barrel Length | 23 1/4 inches |
| Over-All Length | 41 3/4 inches |
| Weight of Gun | 5 lbs. 7 oz. |
| Weight of Scope and Mount | 8 oz. |
| Magazine Capacity | 17 L.R., 19 Long, or 24 Short |
| Front Sight | Ramp type |
| Rear Sight | bead Rocky Mountain patridge type with serrated blade for elevation at 25 yard intervals. |
| Butt Stock & fore-end | American black walnut |

FIG. 6



HAMMER IN COCKED POSITION
(TO REASSEMBLE)

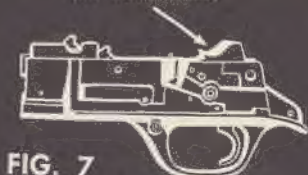


FIG. 7

HAMMER UNCOCKED




List of Parts and Assemblies

J. C. HIGGINS MODEL 31 .22 CAL. Model Number 583.75 (this number is marked on the barrel. Be sure to mention it when ordering).

WHERE TO ORDER REPAIR PARTS — Any Sears retail or mail order store will handle your order.

HOW TO ORDER — Specify Model No., Reference No., Part No. and Part Name. Parts marked with an asterisk (*) must be fitted by gunsmiths in Sears mail order houses, or by outside gunsmiths.

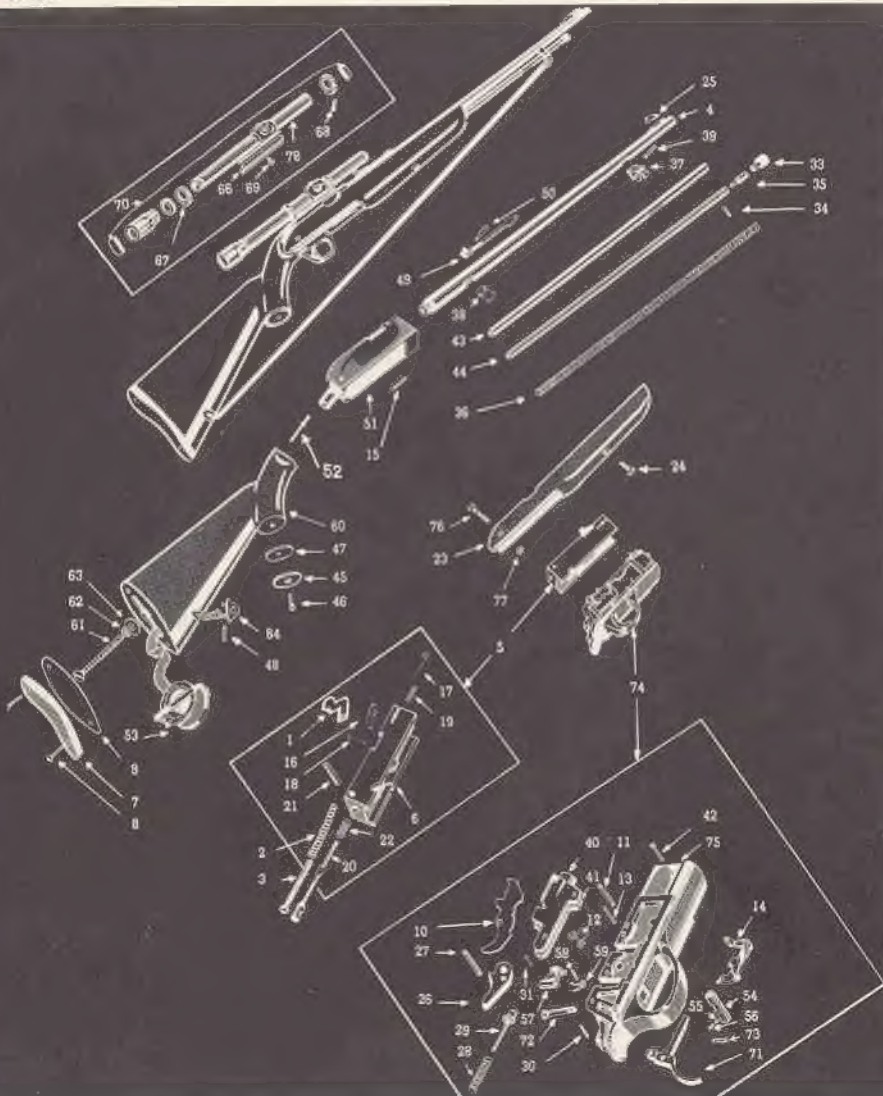


| REF. NO. | PART NO. | PART NAME | REF. NO. | PART NO. | PART NAME |
|----------|----------|--|----------|----------|--|
| 4 | 456 | Barrel | 53 | 412M | Reel Assembly |
| 5 | 457M | Bolt Assembly (Composed of: 457 Bolt 468 Firing Pin 320 Firing Pin Spring 469 Firing Pin Retaining Pin 465 Extractor 466 Extractor Retaining Pin 467 Extractor Spring) | | | (Composed of: 412 Reel 414 Reel Frame 416 Reel Frame Spacer 415M Reel Frame Stud Assembly 411 Reel Gripper Pin 413 Reel Spring 407M Strap Assembly) |
| 6 | 457 | Bolt | 54 | 346 | Safety Button |
| 1 | 483 | Bolt Operating Handle | 55 | 347 | Safety Button Plunger |
| 7 | 344 | Butt Plate | 56 | 348 | Safety Button Plunger Spring |
| 8 | 345 | Butt Plate Screw | 57 | 428 | *Sear |
| 9 | 404 | Butt Plate Trim | 58 | 350 | Sear Pin |
| 10 | 459 | Cartridge Lifter | 59 | 351 | Sear Spring |
| 11 | 308 | Cartridge Lifter Pin | 60 | 485 | Stock |
| 12 | 460 | Cartridge Lifter Spring | 61 | 353 | Stock Bolt |
| 13 | 310 | Cartridge Lifter Spring Retaining Pin | 62 | 354 | Stock Bolt Lock Washer |
| 11 | 492 | Cartridge Lifter Stop Pin | 63 | 182 | Stock Bolt Washer |
| 14 | 462M | *Disconnecter Assembly (Composed of: 462 Disconnecter 312 Disconnecter Hinge Pin) | 64 | 405 | Strap Pull |
| 17 | 463 | Disconnecter Spring | 78 | 436 | Telescope 4X |
| 18 | 461 | Disconnecter Spring Retaining Pin | 66 | 490 | Telescope Base |
| 2 | 495 | Driving Spring | 67 | 386 | Telescope Base Clamp Ring |
| 3 | 489 | Driving Spring Guide | 68 | 387 | Telescope Base Clamp Ring Screw |
| 15 | 464 | *Ejector | 69 | 385 | Telescope Base Lock Screw |
| 16 | 465 | *Extractor | 70 | 434M | Telescope Eye Piece Cap |
| 31 | 466 | Extractor Retaining Pin | | | Assembly (Composed of: 420 Telescope Eye Piece Cap 419 Telescope Front Dust Cap 434 Telescope Dust Cover Cord) |
| 19 | 467 | Extractor Spring | 71 | 427M | Trigger & Trigger Extension |
| 20 | 468 | Firing Pin | | | Assembly |
| 21 | 469 | Firing Pin Retaining Pin | 72 | 359 | Trigger Pin |
| 22 | 320 | Firing Pin Spring | 73 | 360 | Trigger Spring |
| 23 | 470M | Forearm Assembly (Composed of: 470 Forearm 399 Trigger Guard Retaining Screw Nut) | 74 | 491M | Trigger Guard Assembly (Composed of: 459 Cartridge Lifter 308 Cartridge Lifter Pin 492 Cartridge Lifter Stop Pin 460 Cartridge Lifter Spring 310 Cartridge Lifter Spring Retaining Pin 462M Disconnecter Assembly 463 Disconnecter Spring 461 Disconnecter Spring Retaining Pin 472M Hammer Assembly 325 Hammer Pin 326 Hammer Spring 327 Hammer Spring Guide 328 Hammer Spring Pin 474 Magazine Throat, R.H. 475 Magazine Throat, L.H. 381 Magazine Throat Retaining Pin 346 Safety Button 347 Safety Button Plunger 348 Safety Button Plunger Spring 428 Sear 350 Sear Pin 351 Sear Spring 427M Trigger & Trigger Extension Assembly 491 Trigger Guard 359 Trigger Pin 360 Trigger Spring) |
| 24 | 323 | Forearm Retaining Screw | | | |
| 25 | 356 | Front Sight, Low, or | | | |
| | 392 | Front Sight, Medium, or | | | |
| | 378 | Front Sight, High | | | |
| 26 | 472M | Hammer Assembly (Composed of: 472 Hammer 330 Hammer Strut Pin) | | | |
| 27 | 325 | Hammer Pin | | | |
| 28 | 326 | Hammer Spring | | | |
| 29 | 327 | Hammer Spring Guide | | | |
| 30 | 328 | Hammer Spring Pin | | | |
| 33 | 331 | Magazine Cap | | | |
| 34 | 332 | Magazine Cap Pin | | | |
| 35 | 473 | Magazine Follower | | | |
| 36 | 336 | Magazine Spring | | | |
| 37 | 337 | *Magazine Support | | | |
| 38 | 335 | *Magazine Support, Rear | | | |
| 39 | 338 | Magazine Support Pin | | | |
| 40 | 474 | Magazine Throat, Right Hand | | | |
| 41 | 475 | Magazine Throat, Left Hand | | | |
| 42 | 381 | Magazine Throat Retaining Pin | | | |
| 43 | 476 | Magazine Tube | | | |
| 44 | 334 | Magazine Tube, Inside | | | |
| 45 | 401 | Pistol Grip Cap | | | |
| 46 | 403 | Pistol Grip Cap Screw | | | |
| 47 | 402 | Pistol Grip Cap Trim | | | |
| 48 | 409 | Pull Gripper Pin | 75 | 491 | Trigger Guard |
| 49 | 478 | Rear Sight | 76 | 398 | Trigger Guard Retaining Screw |
| 50 | 479 | Rear Sight Elevator | 77 | 399 | Trigger Guard Retaining Screw Nut |
| 51 | 497 | *Receiver | | | |
| 52 | 150 | Receiver Tang | | | Parts List |

OTHER FAMOUS J. C. Higgins GUNS

See these other J. C. Higgins models at your nearest Sears Store, or send a postcard for descriptive literature on all J. C. Higgins Guns to: Sears Roebuck and Company, Dept. 139, Chicago, Illinois. Ask for J. C. Higgins Circular No. 6495. Remember, these guns give you more quality and shooting pleasure for every dollar you invest!


Model 20 PUMP ACTION SHOTGUN

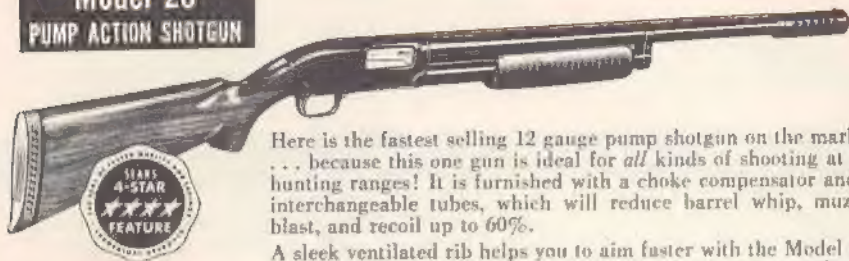

Here is the fastest selling 12 gauge pump shotgun on the market . . . because this one gun is ideal for *all* kinds of shooting at *all* hunting ranges! It is furnished with a choke compensator and 3 interchangeable tubes, which will reduce barrel whip, muzzle blast, and recoil up to 60%.


A sleek ventilated rib helps you to aim faster with the Model 20. It also features an exclusive free-falling action, sturdy recoil pad, choice-grained walnut stock, and a silver nameplate.

Model 50 HIGH-POWERED RIFLE

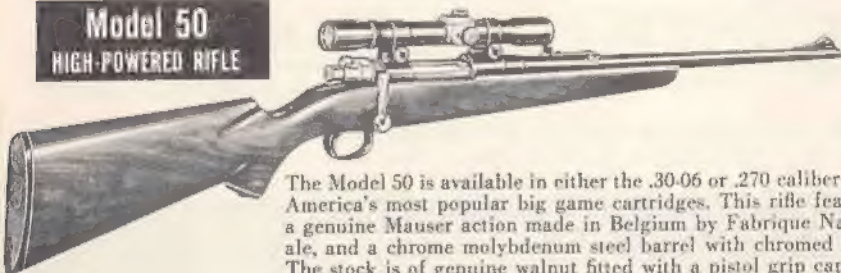

The Model 50 is available in either the .30-06 or .270 caliber . . . America's most popular big game cartridges. This rifle features a genuine Mauser action made in Belgium by Fabrique Nationale, and a chrome molybdenum steel barrel with chromed bore. The stock is of genuine walnut fitted with a pistol grip cap and hard rubber butt plate. This super-accurate hunting rifle is available with either a 2½ or 4 power telescopic sight.

Model 10 BOLT-ACTION SHOTGUN

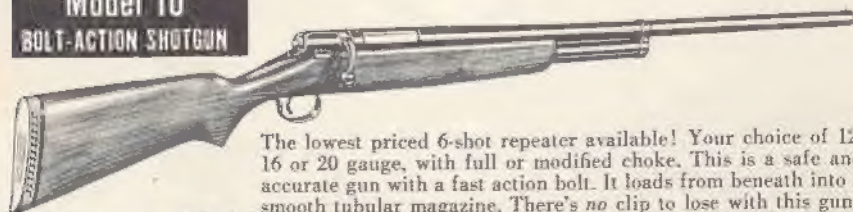

Parts List 995-14

Printed in U.S.A.

The lowest priced 6-shot repeater available! Your choice of 12, 16 or 20 gauge, with full or modified choke. This is a safe and accurate gun with a fast action bolt. It loads from beneath into a smooth tubular magazine. There's *no* clip to lose with this gun! Genuine walnut stock, and rubber recoil pad are furnished as standard equipment.

J. C. Higgins Guns are sold ONLY by Sears, Roebuck and Co. and Simpsons-Sears Limited